

← DRY WALL SCREWS

OPENING FOR WIRES AT EACH END.



1" STANDOFF

CIRCUIT BOARD PARTS SIDE UP

GROMMET IN BEARD

1" STANDOFF

← EXISTING HOLES TO BE ENLARGED TO TAKE GROMMET FOR INSULATION FROM SCREW & SHOCK MOUNTING.

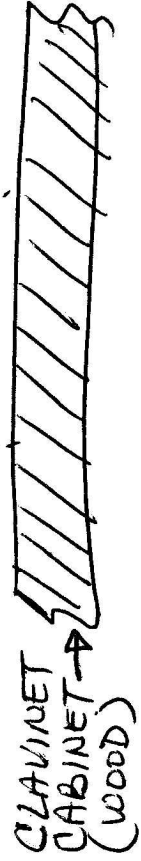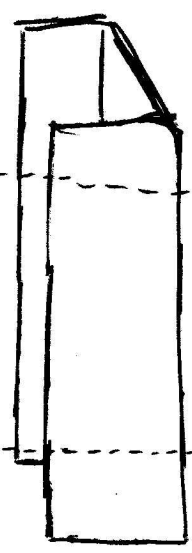

CLAVINET CABINET (WOOD)

EARLY D6 CLAVINET PREAMP SHIELD
DETAIL
Φ3-24-Φ6 GH