
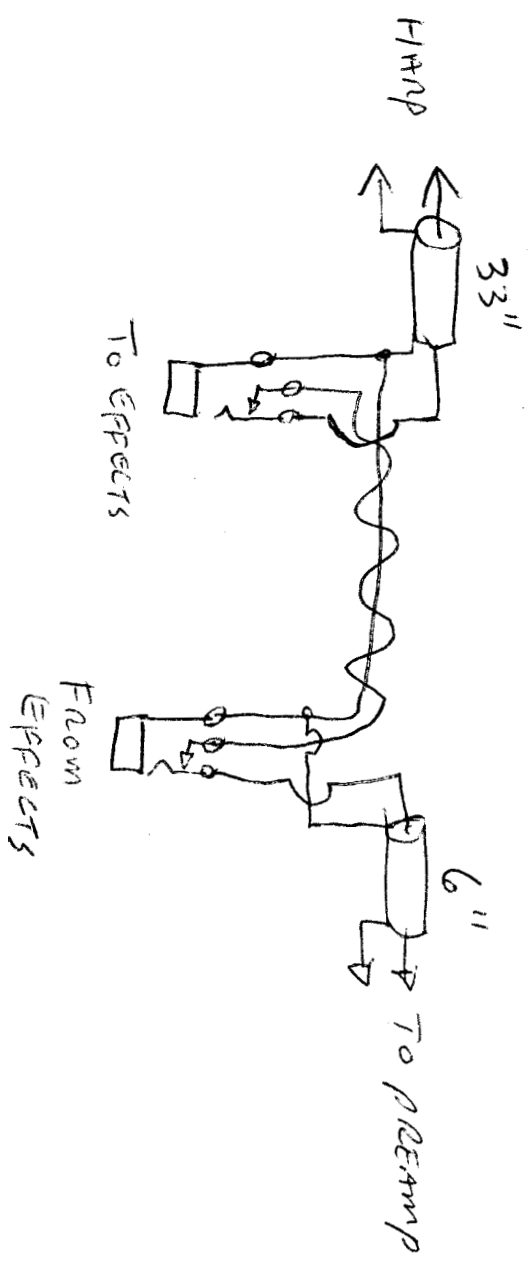


Rhodes Effects Loop Option

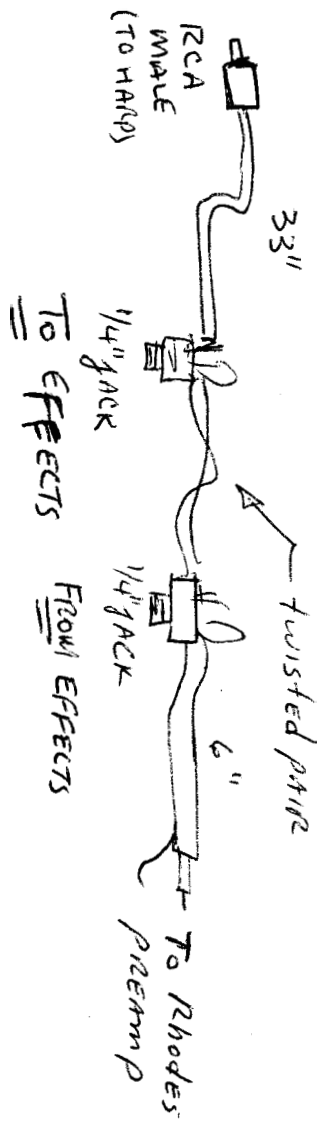

INSTALLATION

1. Remove all old cables/jacks.
 2. Place new jacks in panel holes, TIGHTEN NUTS.
- = run 6" shielded preamp input & ground.

Ø8 Ø5 G14